

Product group: 664 Product number: 572020

The Jet Spray Unit is ideal for applying Unitor cleaning chemicals & degreasers. The main body is made of polyester-coated steel and is portable with a padded carrying strap.



Product information

Supplied complete with tank, spray lance & hose, spray nozzles & pipe, charge pump, pressure gauge and relief valve (set to operate at 6 bar), carrying strap, spare parts pouch.

Features

- Extremely robust coated steel tank even under toughest conditions
- 10 L tank with padded carrying strap
- Large base: stands stable even on uneven surfaces
- Safety lock on the shut-off valve with filter protects against accidental spraying
- 50 cm long brass spray nozzle with flat jet nozzle 80-01 can be rotated 360° angle
- Spray gun and 2.5M long flexible spiral hose for larger range coverage

Benefits

- Ergonomic shut-off valve with filter protects the wrist.
- Safe to operate
- Fast to pressurize
- Easy to apply pre-mixed dilution
- Fine and economical distribution of liquids
- FPM gaskets offer good resistance to many chemicals types

Specification

General

Invent Hazard Material (IMO/EU) classification	NA
Material type and grade	Polyester-coated steel

Dimensions/Weight

Gross Weight [kg]	5.2kg
-------------------	-------

Technical data

Operating pressure [bar]	6 bars
Operating temperature [°C]	50
Working volume [l]	10 liters

Documents

[SDoC and MH](#)

[Jet Spray Manual](#)

[Filling Valve fitting instructions](#)

Directions for use

To assemble

1. Fasten the carrying strap onto the tank.
2. Screw the spray line tightly into the outlet port (Note: the location of the spigot in order to be able to insert the lock)
3. Insert lock (The lock closes and the spray line is secured from unscrewing out of the tank)
4. Push the hose onto the shut-off valve and secure it with the cap nut
5. Screw the spray lance onto the shut-off valve
6. Conduct visual checks to ensure that there's no leaks by pumping up the empty device to 2 bar (The pressure must not decrease more than 0.5 bar (7,35 psi) within 30 minutes)
7. Check the sprayer function: Pull the red button on the safety valve. The pressure must dissipate.

To operate

1. Pull up the red button on the safety valve [12] until all excess pressure is released from the tank
2. Press the pump handle [13] down and turn it counterclockwise. The pump handle is locked in place.
3. Unscrew the pump from the tank
4. Add the spraying liquid to the tank
5. Add the spraying liquid to the tank
6. Swivel in the pump holder
7. With compressed-air filling valve: Connect the compressed-air hose to the compressed-air filling valve. Pressure is built up max. 6 bar (88 psi)
8. When the required pressure has built up, remove the compressed-air hose.

The Sprayer is now ready for use.

To empty

1. Pull up the red button on the safety valve until all excess pressure is released from the tank
2. Lock the pump handle in place
3. Unscrew the pump from the tank

4. Empty and rinse the device with clear water. **THIS UNIT MUST BE THOROUGHLY WASHED OUT IMMEDIATELY AFTER USE** with fresh water, shaking the unit well and spraying the water out. Remove nozzle to save time. Also rinse nozzle in fresh water.
5. Wipe off the device with a moist cloth.
6. For drying and storing the device, keep the tank and pump separate in a dry place protected from sunlight and freezing temperatures.

Related products

Accessories

770983
FILLING VALVE 6222-NA
770984
FILLING VALVE 6222-NB

Is accessory to

778993
OILSPILL MARPOL KIT 12 BARREL(2 PALLETS)
778922
OILSPILL MARPOL KIT1 BARREL(1 PALLET)

Is frequently bought together with

765018
ENVIROCLEAN 25 LTR
575613
AQUABREAK PX 25 LTR
777708
MULTI CLEAN 25 LTR
607826
AQUATUFF 25 LTR
571554
FORE AND AFT 25 LTR
778843
EASYCLEAN FLOOR & HARD SURFACE 10LTR
571729
HP WASH 25 LTR

This page is printed from:

<https://www.wilhelmsen.com/product-catalogue/products/cleaning-equipment/application-dilution-and-mixing-equipment/applicators/unitor-jet-spray-unit-6bar-10-ltr-steelfpm/>